

FAILURE CODE TABLE

Fault code	Warning light on	Blinks		Failure description
		long	short	
11	YES	1	1	barometric pressure sensor circuit
12	YES	1	2	TPS - throttle position sensor
13	YES	1	3	
14	YES	1	4	engine temperature sensor
15	YES	1	5	
16	YES	1	6	intake air temperature sensor
17	YES	1	7	
21	YES	2	1	wrong pick-up sensor signal sequence
22	YES	2	2	pick-up sensor circuit
23	YES	2	3	sensor power supply circuit, live
24	YES	2	4	battery voltage too low
25	YES	2	5	battery voltage too high
31	YES	3	1	injector 1 circuit
32	YES	3	2	
33	YES	3	3	
34	YES	3	4	injector 2 circuit
35	YES	3	5	
36	YES	3	6	
41	YES	4	1	coil
42	YES	4	2	
43	YES	4	3	
51	YES	5	1	fuel pump relay
52	YES	5	2	
53	YES	5	3	
54	NO	5	4	coolant temperature indicator
55	NO	5	5	
61	YES	6	1	injection relay
62	YES	6	2	
63	YES	6	3	
64	NO	6	4	CALIFORNIA ONLY
65	NO	6	5	
66	NO	6	6	
75	YES	7	5	CO potentiometer
76	YES	7	6	
77	YES	7	7	
79	YES	7	9	fall sensor (open circuit)